

## NISSWA SWING SWING HANGING SUGGESTIONS Iolidesigns.com | 1-877-740-3387

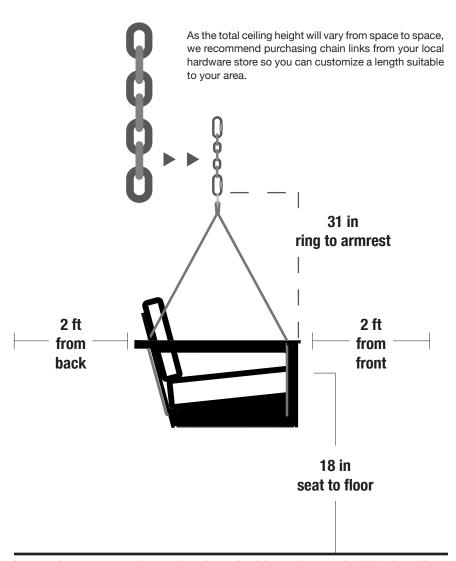

In general, we recommend approximately a 2-ft minimum clearance in the back and front, and a foot on either side. As far as the seat height, we recommend it to be approximately 18" from the ground, but that can be a general approximation, due to each specific user.

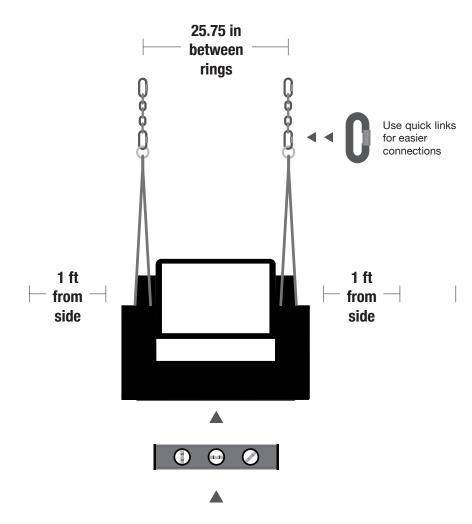

Check that the swing hangs level. Use a level on the swing seat for best measurement.