
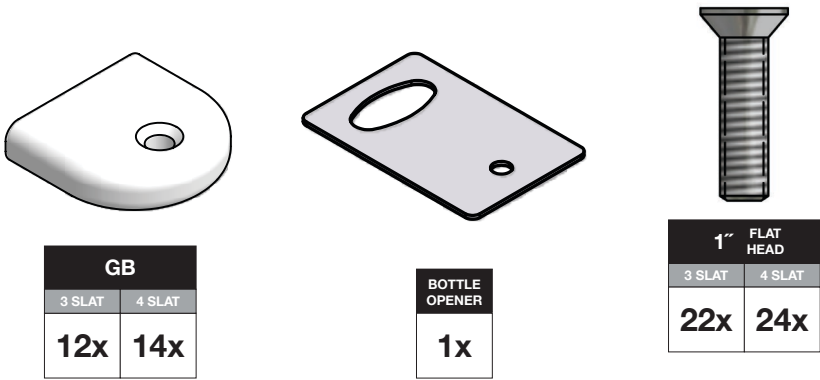
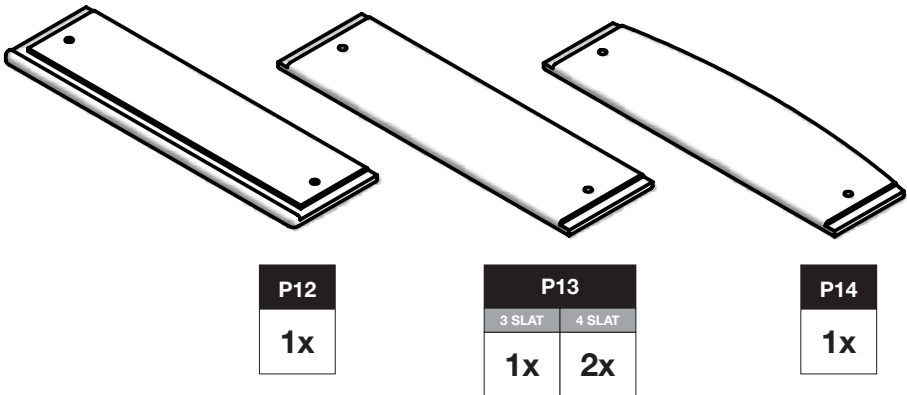
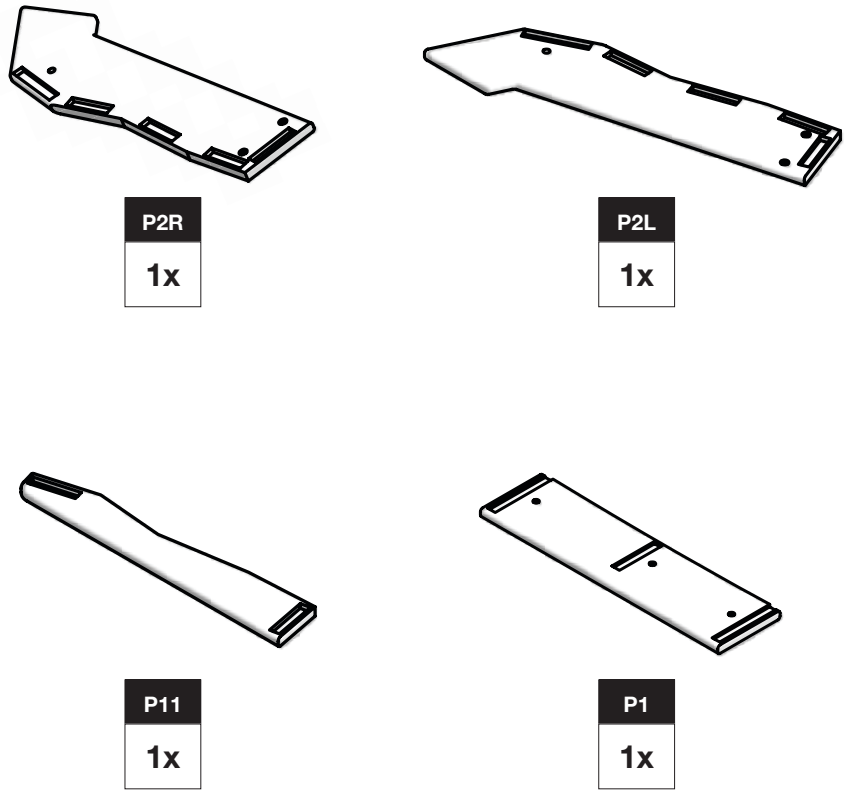


INCLUDED PARTS

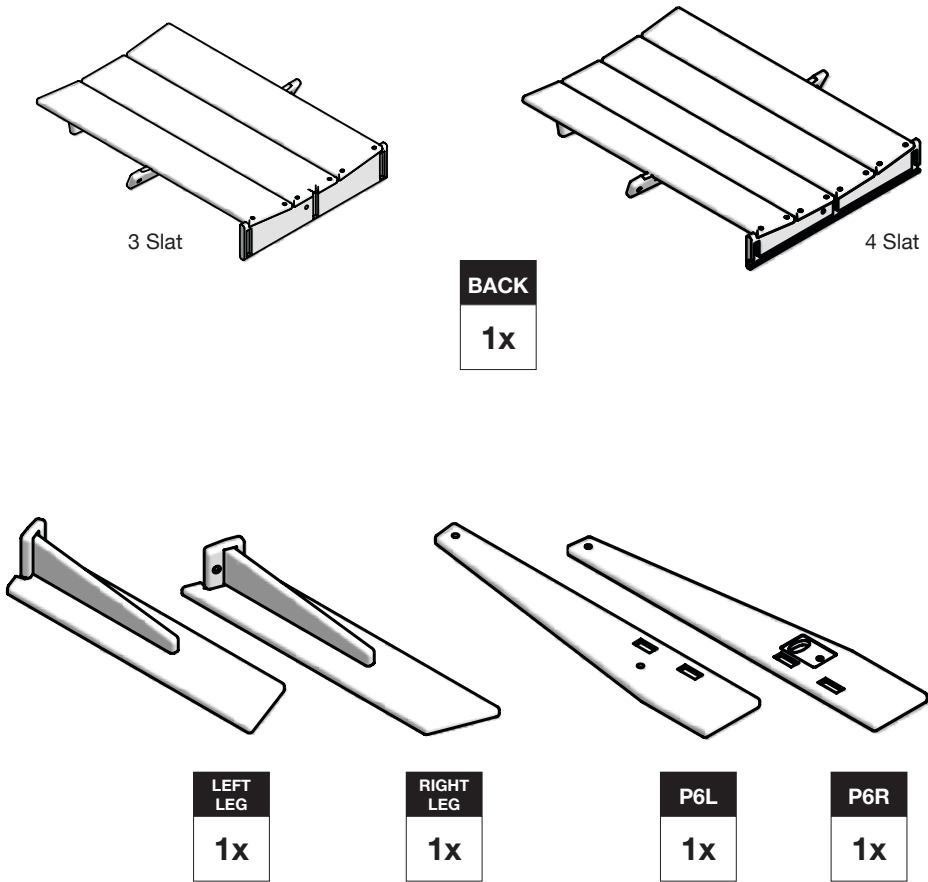


*Bolt shown actual size

ASSEMBLY TIPS: 5 Important Points You **NEED** to Read

1. Prior to beginning assembly, please inspect and inventory the parts to make sure you have everything and that nothing was damaged during shipping. If damage has occurred, please take photos and go to lollidesigns.com/damage. Rest assured we'll get it taken care of straight away!
2. To avoid scratching furniture, assemble on a clean, soft surface like a blanket, carpet, or the flattened cardboard box the furniture was shipped in.
3. **Start all bolts by hand to ensure proper alignment and to prevent cross threading.** Then using the provided tool, tighten until you feel resistance. Do not overtighten.
4. Bolts should not be forced, but some components, particularly blocks, fit snug but can still be installed without tools or excess force.
5. If parts are still not going together, please send us a photo of the part you are having trouble with.

BLOCK & BOLT INSTALLATION

Insert bolts through countersunk hole side of blocks as shown below.

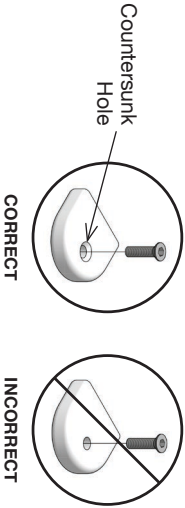

"Loll Designs inspires people to appreciate the outdoors."

Greg Benson - Founder

♻️ RECYCLE THE PACKAGING

We've gone through great lengths to make as much of our packaging as possible recyclable. The cardboard box, paper wrap, filler and paper bags can all go in your recycling bin. The muslin hardware bags replaced plastic bags with the intention of reducing plastic and encouraging reuse. Loll Designs and Planet Earth thank you!

WE WANT YOU TO LOVE YOUR LOLL


For more info and visual aids, watch the assembly videos at www.lollidesigns.com/videos
For product care & maintenance, visit www.lollidesigns.com/care-maintenance
For further lollygagging assistance, please reach out!

+1 877-740-3387
sales@lollidesigns.com

5912 Waseca Street
Duluth, Minnesota 55807

ASSEMBLY INSTRUCTIONS & PRODUCT INFO:

ADIRONDACK CHAIR

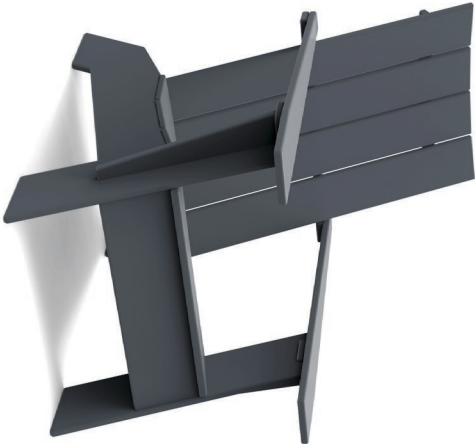

1

BACK 1x

GB 1x

P2L 1x

1"
FLAT
HEAD

1x

2

GB 1x

P11 1x

1"
FLAT
HEAD

1x

REPEAT STEP 1 TO ATTACH P2R

3

P1 1x

GB 3x

1"
FLAT
HEAD

3x

4


P12 1x

GB 2x



1" FLAT HEAD

2x

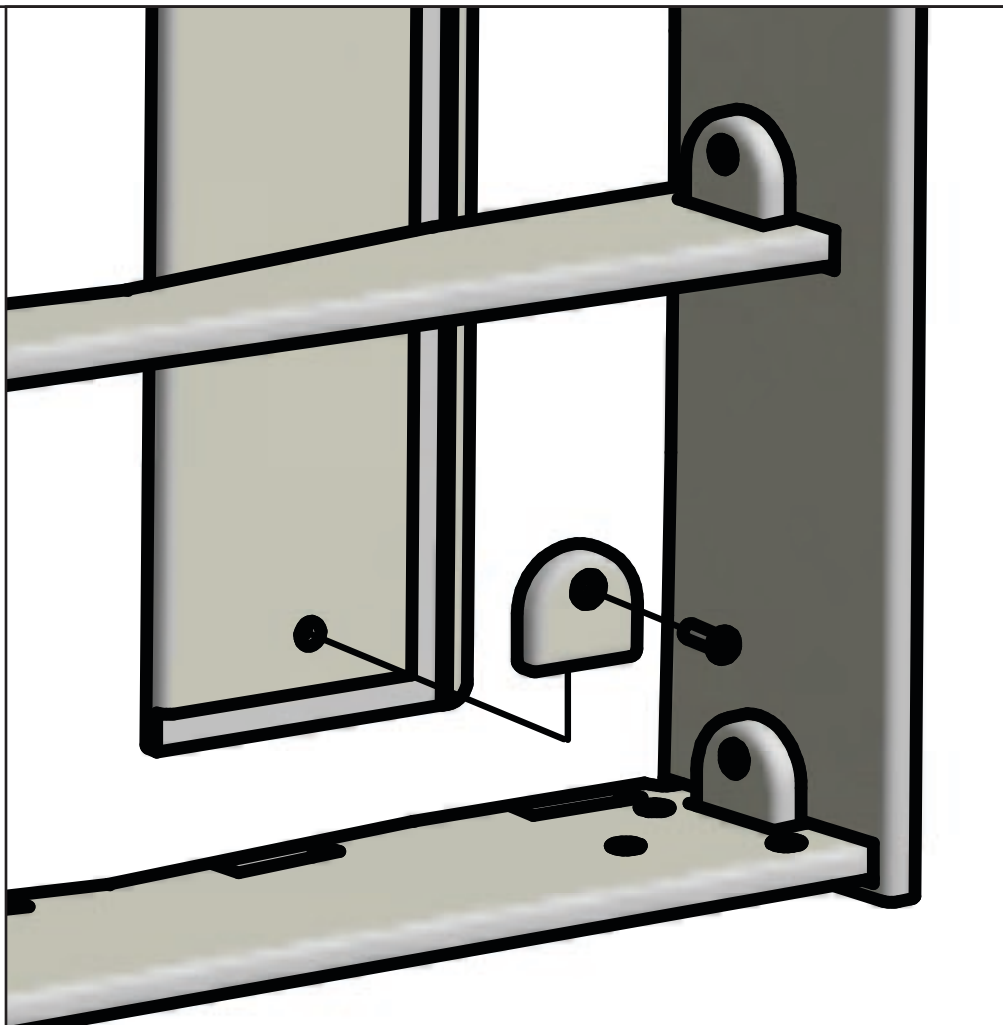

5

P13

2&3 SLAT	4 SLAT
1x	2x

GB


3 SLAT	4 SLAT
2x	4x



1" FLAT HEAD

3 SLAT	4 SLAT
2x	4x

*4 Slat assembly not shown.

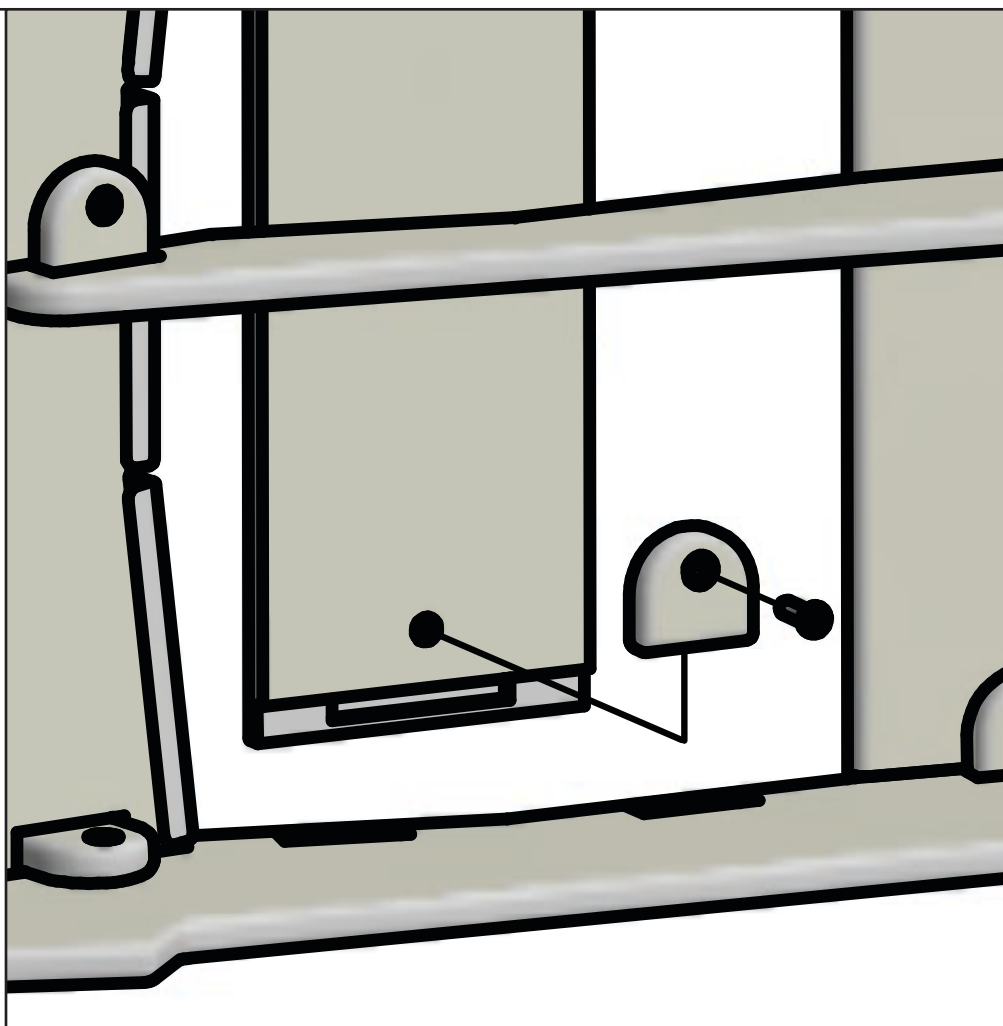

6


P14 1x

GB 2x



1" FLAT HEAD

2x


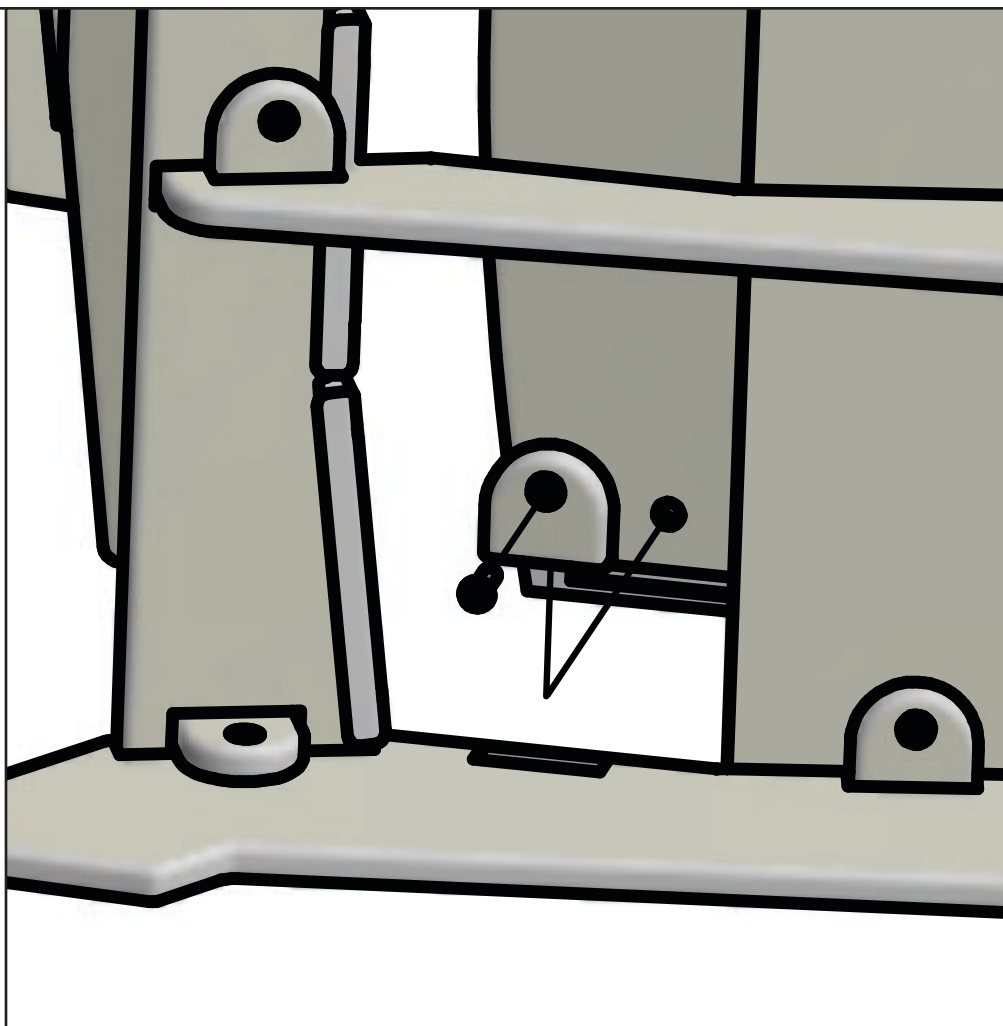


7

RIGHT LEG 1x



1" FLAT HEAD 3x

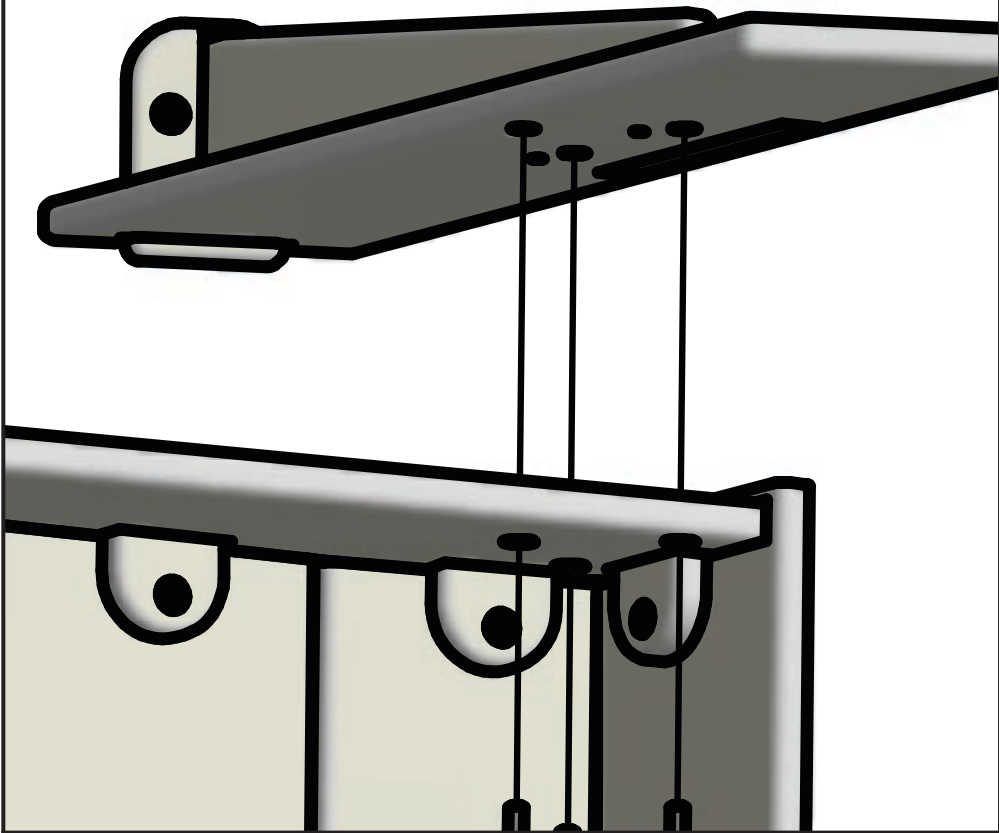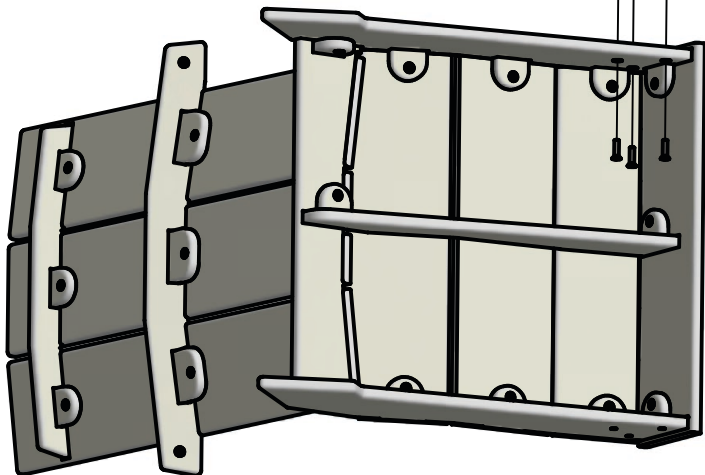

REPEAT TO ATTACH LEFT LEG


8

P6L 1x

P6R* 1x



1" FLAT HEAD 4x

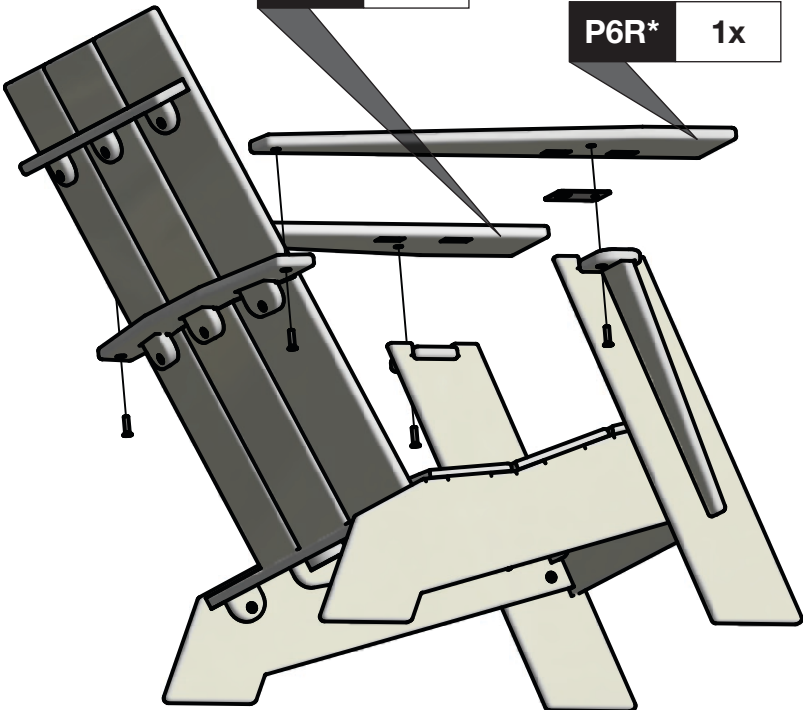

**Do not remove tape from bottle opener in Right Arm (P6R) until all bolts are tightened and secure.*

