



SHARE YOUR LOLL

Loll Designs strives to build long-term relationships based on confidence and trust with our customers. We sit beside, on top, and beneath the quality of our fine furniture and will make things right if you are not completely satisfied with your purchase. Loll Designs hereby guarantees that the piece will be of good quality and workmanship, free from faults and defects. Loll warrants that all components will not fail, under normal use, for five years from the year mark on the piece or the date of purchase. *For commercial orders the warranty is three years.

5 YR WARRANTY

Your new Loll furniture is a no maintenance product. You'll never need to paint or stain it and it can be left outside all year regardless of the season. It will not rot, even if left standing in water. Nonetheless, we're pretty sure your Loll furniture will get a lot of use and will at some point need cleaning. We recommend a garden hose and incorporating a soft bristle brush. Adding a tablespoon or two of your favorite eco-friendly soap to the wash will get everything squeaky clean. Mineral deposits left over from hard water can be removed with a solution of vinegar and water. Loll offers a cleaning kit that has everything you need for great results. Also see our cleaning video at lollidesigns.com/videos.

PRODUCT CARE


Loll Designs inspires people to appreciate the outdoors.

ASSEMBLY INSTRUCTIONS & PRODUCT INFO: ALFRESCO BENCH 68" & 81"



LOLL TOOL

Locate the box marked "Tool Included"

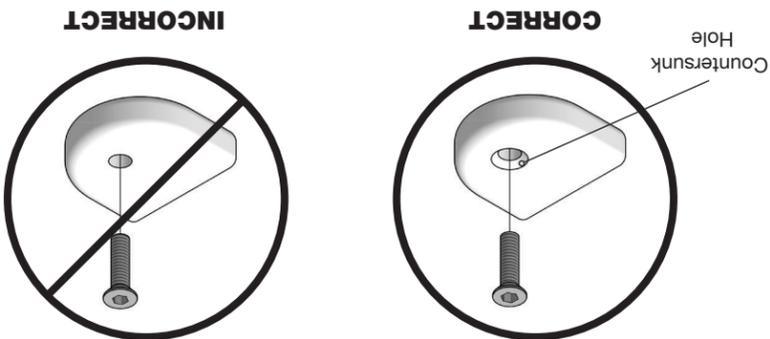

Insert bolts through countersunk hole side of blocks as shown below.

BLOCK & BOLT INSTALLATION

ASSEMBLY TIPS

To avoid damaging furniture perform the assembly of your Loll furniture on a clean soft surface like a blanket, carpet, or the flattened cardboard box the furniture was shipped in. Components should not be unnecessarily forced together! If it seems parts aren't fitting together you likely have something wrong and you should read the instructions to ensure you are aligning the proper components. If your piece of furniture requires "Blocks" for assembly one side may have protective film on it. This surface is hidden after assembly so the film can remain on the block or it can be removed. Use a Cordless Screw Gun if you have one and know how to use it. Set the clutch setting at medium torque. We do not recommend using an electric drill with a cord and without a clutch to install bolts in inserts as you can easily overtighten and damage the product. All bolts come standard with a thread coating to reduce bolts loosening after assembly while still allowing removal and reuse of the bolt. Start all bolts by hand, with the Allen Key, or the Loll Tool and tighten firmly until parts are drawn tight together and you can't muscle the bolt any tighter. It's virtually impossible to over tighten by hand. Watch the assembly videos at www.lollidesigns.com/videos for even more information and visual aids. If you have more questions please contact your Loll Sales Associate or Customer Service for support at 877.740.3387. **A Pro Tool Kit!** can also be purchased from Loll for multi piece assembly jobs.

**** Please Recycle the BOX and paper packaging. The green plastic stretch wrap we use is compostable.**

Scan for assembly tips and videos



DAMAGED PRODUCT

Sometimes accidents occur. Please inspect your Loll furniture when you receive it to make sure that it has not been damaged during shipping. If damage has occurred please take digital pictures of the damaged furniture and the box it was shipped in, and email them to sales@lollidesigns.com or call Customer Service using our toll free number: 877.740.3387, ext. 1. The damage will be assessed and you will be contacted with a solution to the problem. It may be helpful to save all of your packaging material in case a return is necessary.


INCLUDED PARTS

SIDE		COUNT	SIDE SLAT		COUNT	MIDDLE SLAT		COUNT
		2			2			1
SIDE BRACE		COUNT	END		COUNT	2 SLOT BRACE		COUNT
		2			2			2
		COUNT			COUNT	5 SLOT BRACE		COUNT
								4
								3
								68"
BLOCK G		COUNT	1.375" BOLT		COUNT	1" BOLT		COUNT
		29			10			19
		34			12			22
		68"			68"			81"
		81"			81"			8
								5/8" BOLT

ASSEMBLY INSTRUCTIONS


* It is very important that you finger tighten all bolts into inserts to ensure that you do not cross-thread bolts and inserts before tightening. It will also be easier if you wait to tighten bolts until you have all bolts installed and the piece completely assembled. This will allow for more movement of individual pieces and help in aligning holes with inserts. Use the Allen Tool provided to finish tighten bolt until snug.

1 FIT ENDS AND SIDE BRACE TOGETHER

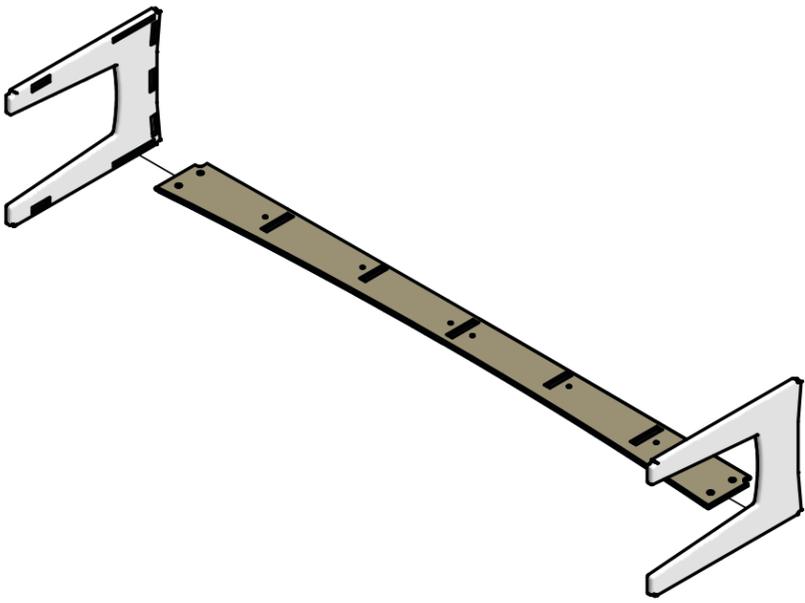


*Please read Assembly Tips before beginning assembly.
Fit Side Brace edges into the pocket cut outs of the Ends.

2 ATTACH SIDE

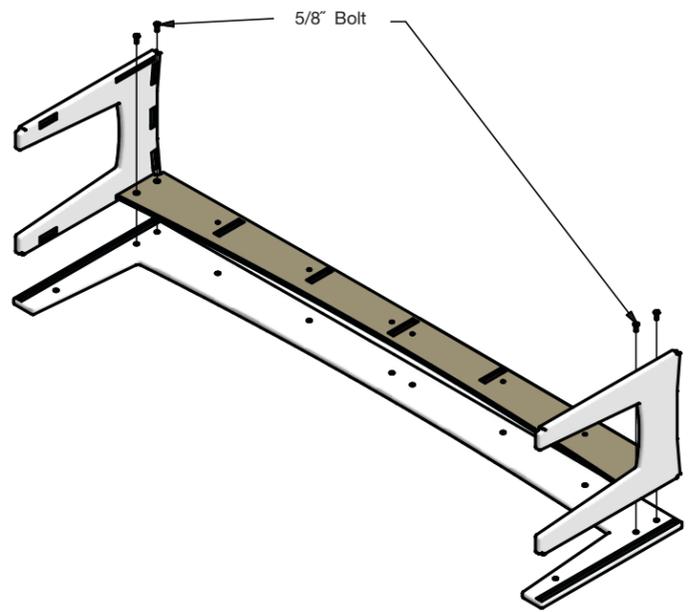

Fit Side Brace and Ends with the Side by fitting the Ends long edges into the Sides groove track cut outs. Insert 5/8" bolts through the Side Braces holes into the Sides threaded holes and finger tighten.


3 FASTEN SIDE

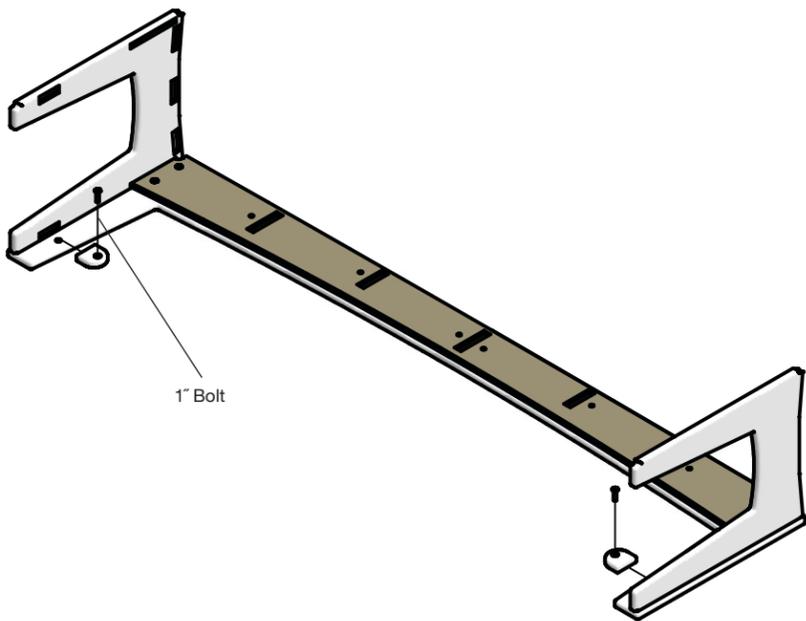

Place Blocks G into the Ends pocket cut outs (recessed hole side up), insert bolts through the blocks into the Ends threaded holes, and finger tighten.


Repeat Steps 1-3 to attach other side.

4 ATTACH BRACES

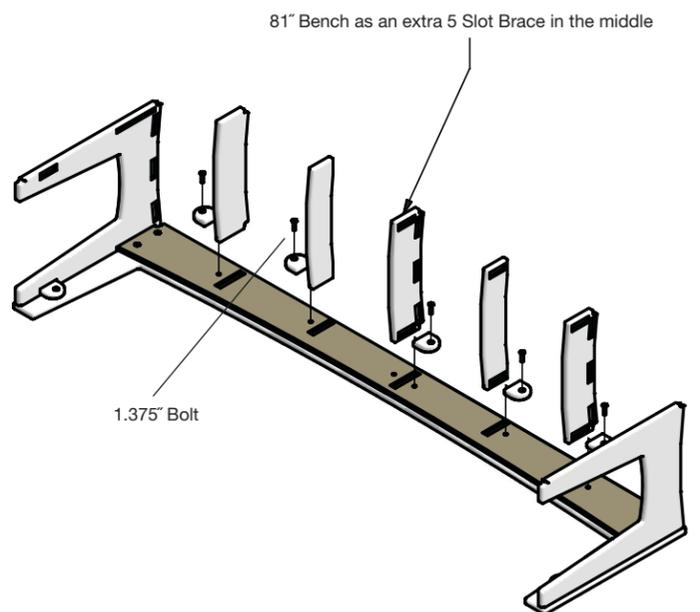


Fit 5 Slot Braces in the outer and center Side Brace pocket cut outs (for 81" bench an additional 5 Slot Brace is needed in the center) with the pocket cut out of the 5 Slot Brace facing the threaded holes of the Side Brace (68" version has two threaded holes for center brace. One will be used and the other left open). Fit 2 Slot Braces in the inner Side Brace pocket cut outs. Place Blocks G into the Slot Brace cut outs, insert bolts, and finger tighten. Repeat Steps 1-4 to attach other side.

5 ATTACH SIDE SLAT

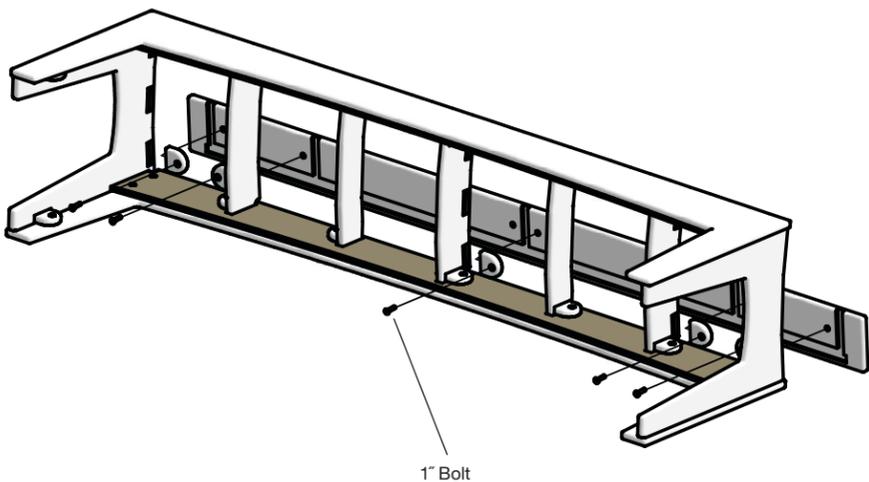

Fit groove track cut outs of the Side Slats with the assembled Side and Braces. Place Blocks G into the 5 Slot Brace pocket cut outs, insert bolts, and finger tighten.

6 ATTACH MIDDLE SLAT

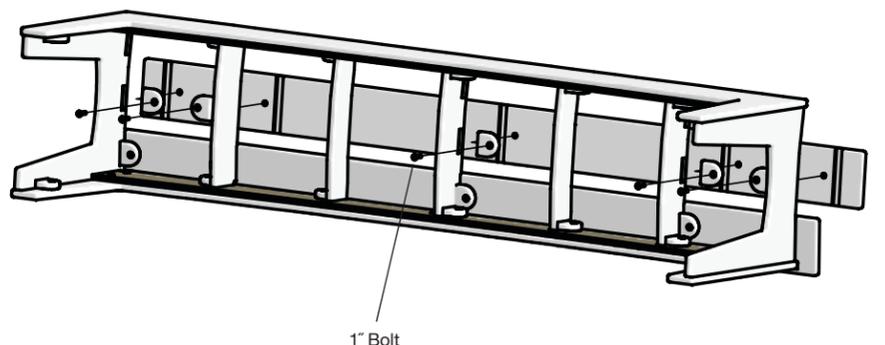

Fit groove track cut outs of the Middle Slats with the assembled Ends and Braces. Place Blocks G into the 5 Slot Brace pocket cut outs, insert bolts, and finger tighten. Repeat Step 5 to attach other Side Slat.

*Using provided wrench securely tighten all bolts.