





BRODIE WALL HOOK INSTALLATION

HOLLOW WALL WITH TOGGLER ANCHOR


For additional assistance an installation video can be found on the Brodie product page.
www.lolldesigns.com/products/brodie-wall-hook

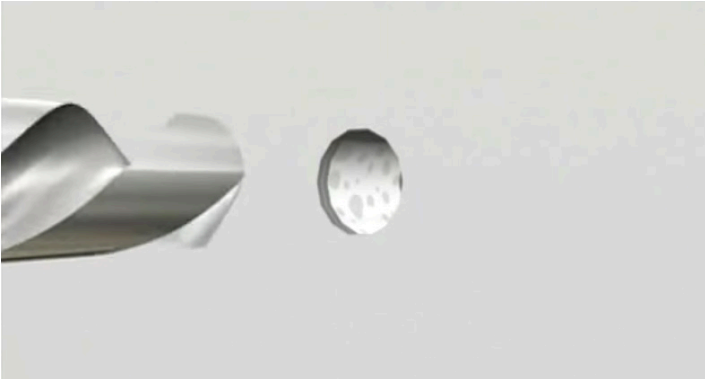


1. Drill 1/2 inch diameter hole.

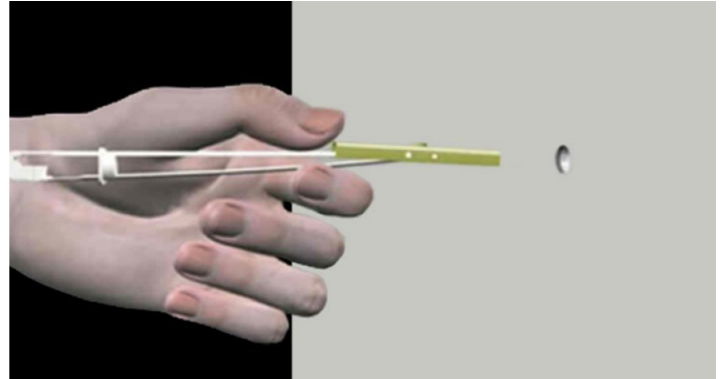


2. Hold metal channel flat against the plastic straps and slide the channel through the hole.

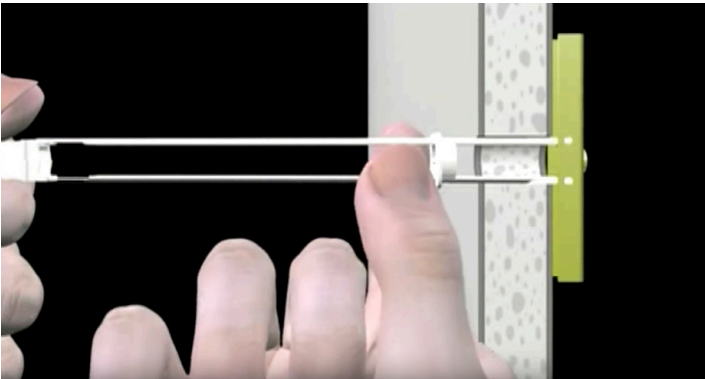


3. Pull plastic straps toward you until the channel rests behind the wall. Slide the cap down the straps until the cap's flange is flush with the wall.

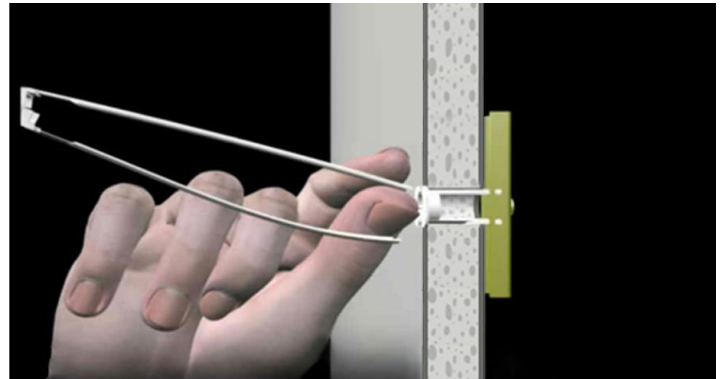

4. Place your thumb between the straps at the wall and push your thumb side to side, snapping off the straps level with the cap.

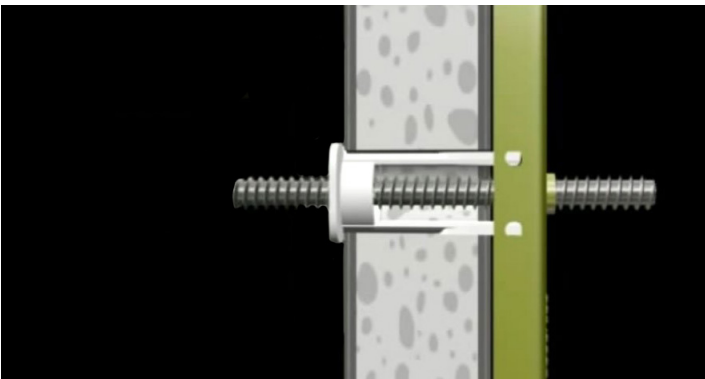

5. Insert provided stud through the cap and thread into the channel. Allow 3/8 inch thread to show.

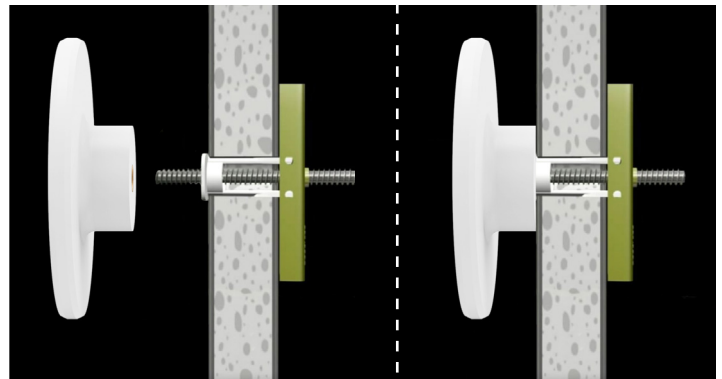

6. Align your Brodie and thread on until tight with the wall. Enjoy!

LOLL DESIGNS INSPIRES PEOPLE TO APPRECIATE THE OUTDOORS.

5912 WASECA ST. | DULUTH, MN 55807
877-740-3387 | sales@lolldesigns.com