






7866-047-778 Reach out if you need lollygagging assistance.

We want you to love your Loll.

before beginning assembly. Locate the box marked "Tool Included"

## LOLL TOOL

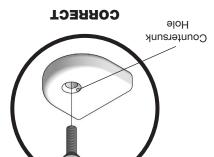



Insert bolts through countersunk hole side of blocks as shown below.

## BLOCK & BOLT INSTALLATION

wrap we use is compostable.

 $^{**}$  Please Recycle the BOX and paper packaging. The green plastic stretch can also be purchased from Loll for multi piece assembly jobs.


Sales Associate or Customer Service for support at 877.740.3387. A Pro Tool Kit information and visual aids. If you have more questions please contact your Loll hand. Watch the assembly videos at www.lolldesigns.com/videos for even more you can't muscle the bolt any tighter. It's virtually impossible to over tighten by Key, or the Loll Tool and tighten firmly until parts are drawn tight together and still allowing removal and reuse of the bolt. Start all bolts by hand, with the Allen standard with a thread coating to reduce bolts loosening after assembly while in inserts as you can easily overtighten and damage the product. All bolts come recommend using an electric drill with a cord and without a clutch to install bolts and know how to use it. Set the clutch setting at medium torque. We do not on the block or it can be removed. Use a Cordless Screw Gun if you have one protective film on it. This surface is hidden after assembly so the film can remain If your piece of furniture requires "Blocks" for assembly one side may have should reread the instructions to ensure you are aligning the proper components. it seems parts aren't fitting together you likely have something wrong and you was shipped in. Components should not be unnecessarily forced together! If soft surface like a blanket, carpet, or the flattened cardboard box the furniture


To avoid damaging furniture perform the assembly of your Loll furniture on a clean

\*Please read before beginning assembly! **ASSEMBLY TIPS** 

material in case a return is necessary.

you will be contacted with a solution to the problem. It may be helpful to save all of your packaging Customer Service using our toll free number: 872.740.3387, ext. 1. The damage will be assessed and damaged furniture and the box it was shipped in, and email them to sales@lolldesigns.com or call it has not been damaged during shipping. If damage has occurred please take digital pictures of the





tips and videos

## Your new Loll furniture is a no maintenance product. You'll never need to paint or stain it and it can be PRODUCT CARE

SHARE YOUR LOLL

commercial orders the warranty is three years.

Loll Designs inspires people to appreciate the outdoors.

not fail, under normal use, for five years from the year mark on the piece or the date of purchase. \*For

of good quality and workmanship, free from faults and defects. Loll warrants that all components will

are not completely satisfied with your purchase. Loll Designs hereby guarantees that the piece will be


We sit beside, on top, and beneath the quality of our fine furniture and will make things right if you Loll Designs strives to build long-term relationships based on confidence and trust with our customers.

SALMELA - EMIN HD **ASSEMBLY INSTRUCTIONS & PRODUCT INFO:** 

**7866.047.778** 


moo.engieebllol




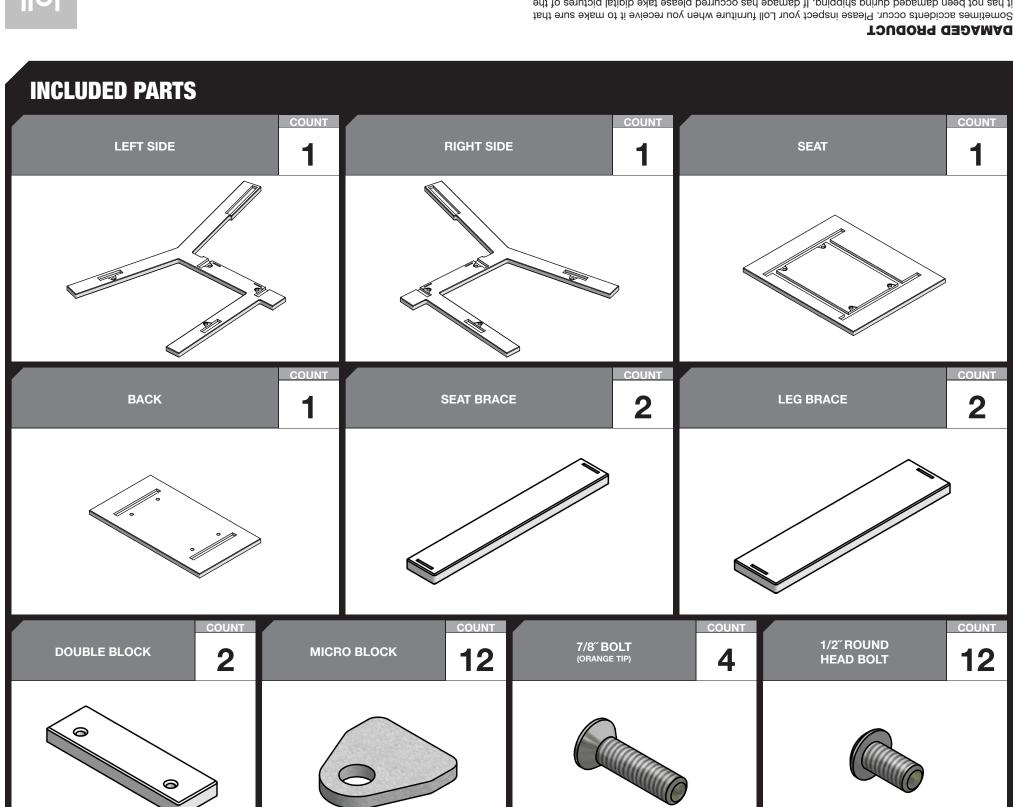

2

ATTACH SECOND SEAT BRACE, LEG BRACE & SIDE

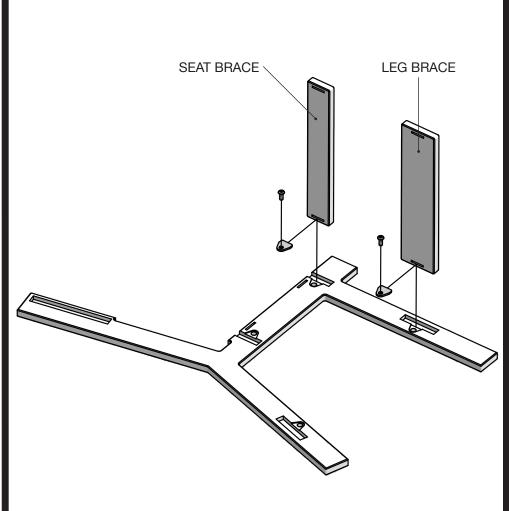

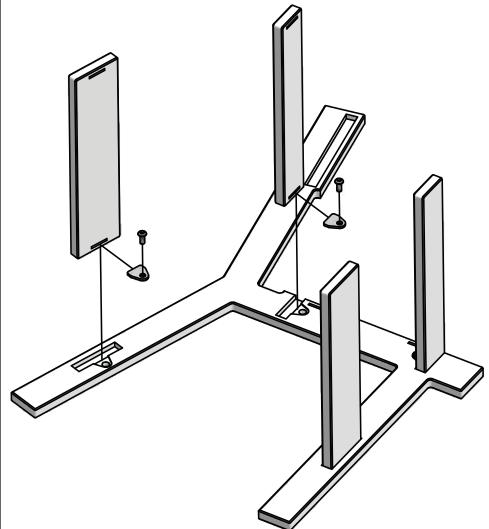

\*Please read **Assembly Tips** before beginning assembly.

Lay Left Side down flat with cut outs and threaded holes facing up. Fit Seat Brace and Leg Brace into the Sides cut outs as shown. Place Micro Blocks into the Seat Brace and Leg Brace pocket cut outs, insert  $1/2^{\circ}$  Round Head Bolts through the blocks into the Sides threaded holes, and finger tighten.


Fit second Seat and Leg Brace into the Sides cut outs as shown. Place Micro Blocks into the Seat and Leg Brace pocket cut outs, insert 1/2" Round Head Bolts through the blocks into the Sides threaded holes, and finger tighten.


Attach Right Side using step 1-2.


3

ATTACH SEAT



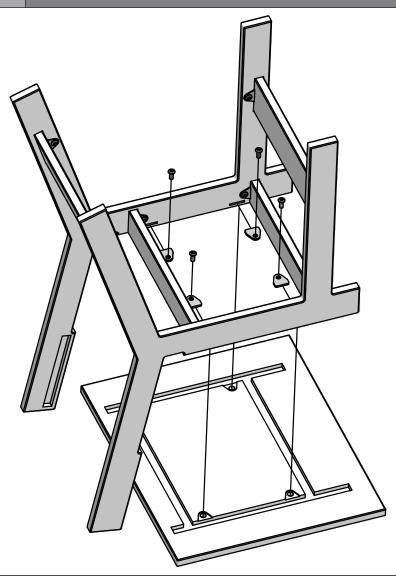



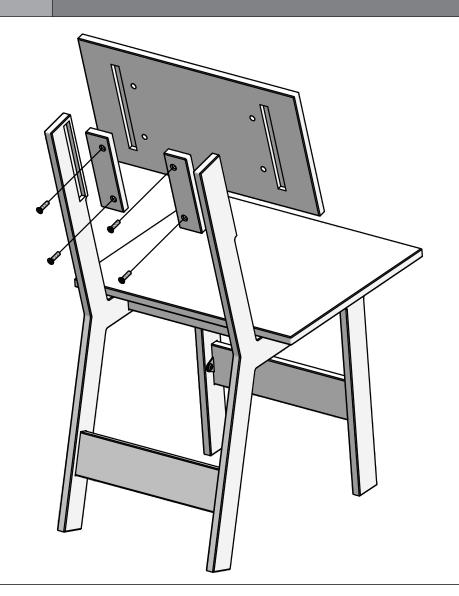

Fit the Back cut outs with the assembled Sides. Place Double Blocks into the Side's pocket cut outs (recessed hole side out), insert 7/8″ Bolts (orange tip) through the blocks into the Seats threaded holes, and finger tighten.

\*Complete assembly by securely tightening all bolts using provided wrench.