7866-047-778







SHARE YOUR LOLL


commercial orders the warranty is three years.

Reach out if you need lollygagging assistance.

before beginning assembly. Locate the box marked "Tool Included"

We want you to love your Loll.

LOLL TOOL CORRECT Hole Countersunk

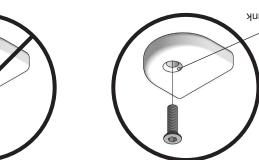



Insert bolts through countersunk hole side of blocks as shown below.

BLOCK & BOLT INSTALLATION

wrap we use is compostable.

** Please Recycle the BOX and paper packaging. The green plastic stretch can also be purchased from Loll for multi piece assembly jobs.

Sales Associate or Customer Service for support at 877.740.3387. A Pro Tool Kit information and visual aids. If you have more questions please contact your Loll hand. Watch the assembly videos at www.lolldesigns.com/videos for even more you can't muscle the bolt any tighter. It's virtually impossible to over tighten by Key, or the Loll Tool and tighten firmly until parts are drawn tight together and still allowing removal and reuse of the bolt. Start all bolts by hand, with the Allen standard with a thread coating to reduce bolts loosening after assembly while in inserts as you can easily overlighten and damage the product. All bolts come recommend using an electric drill with a cord and without a clutch to install bolts and know how to use it. Set the clutch setting at medium torque. We do not on the block or it can be removed. Use a Cordless Screw Gun if you have one protective film on it. This surface is hidden after assembly so the film can remain If your piece of furniture requires "Blocks" for assembly one side may have should reread the instructions to ensure you are aligning the proper components. it seems parts aren't fitting together you likely have something wrong and you was shipped in. Components should not be unnecessarily forced together! If soft surface like a blanket, carpet, or the flattened cardboard box the furniture To avoid damaging furniture perform the assembly of your Loll furniture on a clean


*Please read before beginning assembly! **ASSEMBLY TIPS**

material in case a return is necessary.

you will be contacted with a solution to the problem. It may be helpful to save all of your packaging Customer Service using our toll free number: 877.740.3387, ext. 1. The damage will be assessed and damaged furniture and the box it was shipped in, and email them to sales@lolldesigns.com or call it has not been damaged during shipping. If damage has occurred please take digital pictures of the Sometimes accidents occur. Please inspect your Loll furniture when you receive it to make sure that

DAMAGED PRODUCT



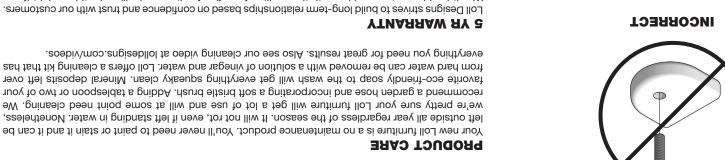

tips and videos

Loll Designs inspires people to appreciate the outdoors.

not fail, under normal use, for five years from the year mark on the piece or the date of purchase. *For

of good quality and workmanship, free from faults and defects. Loll warrants that all components will

are not completely satisfied with your purchase. Loll Designs hereby guarantees that the piece will be

We sit beside, on top, and beneath the quality of our fine furniture and will make things right if you


SALMELA HALL BENCH **ASSEMBLY INSTRUCTIONS & PRODUCT INFO:**

78EE.047.778

moo.engieebllol






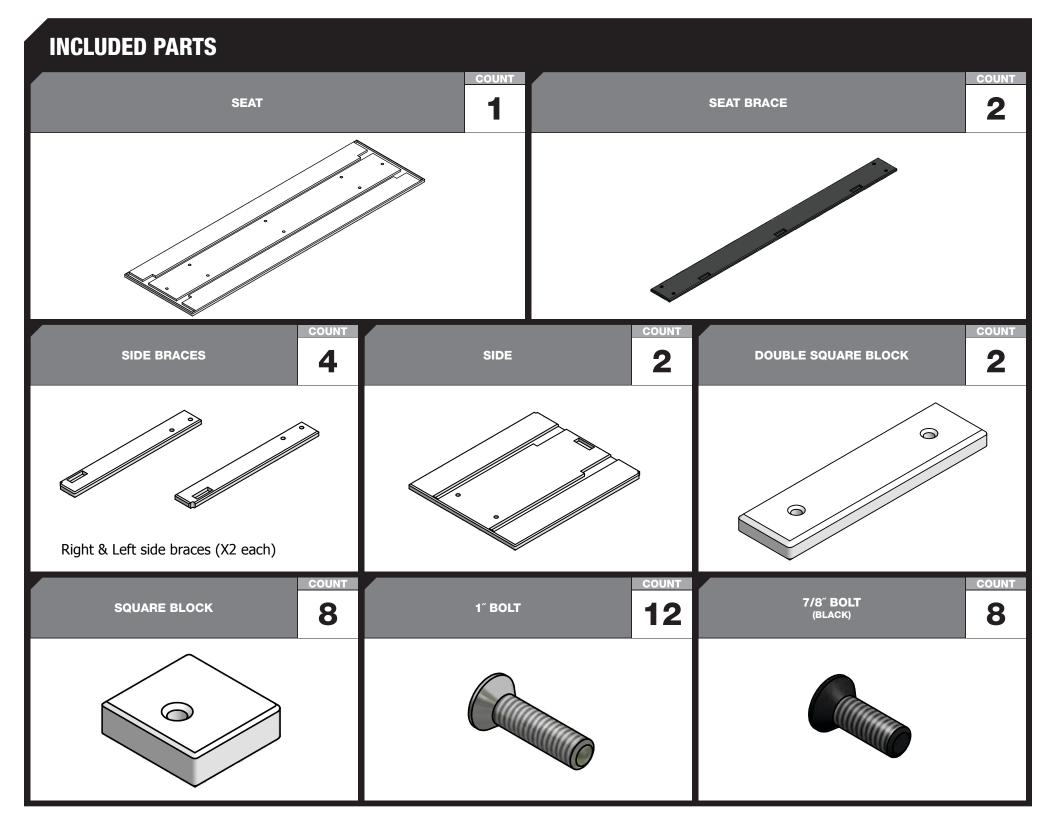

* It is very important that you finger tighten all bolts into inserts to ensure that you do not cross-thread bolts and inserts before tightening. It will also be easier if you wait to tighten bolts until you have all bolts installed and the piece completely assembled. This will allow for more movement of individual pieces and help in aligning holes with inserts. Use the Allen Tool provided to finish tighten bolt until snug.

1

ASSEMBLE SIDES

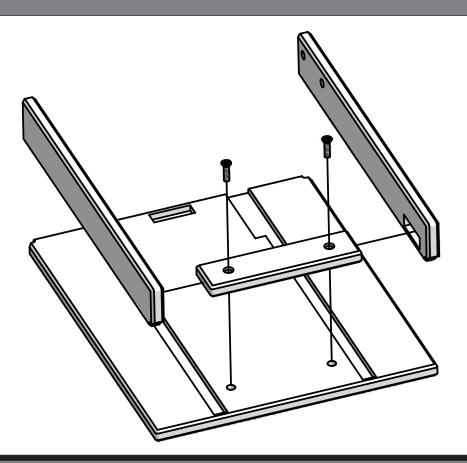


*Please read **Assembly Tips** before beginning assembly.

Lay a Side down on clean surface with cut outs face up. Place a Double Square Block into the Left and Right Side Braces as shown (recessed hole side out). Fit braces and block with the Side's cut outs and align the block with the Side's threaded holes. Insert 1" bolts and finger tighten.

Repeat for opposite Side.


2 ATTACH SEAT BRACES

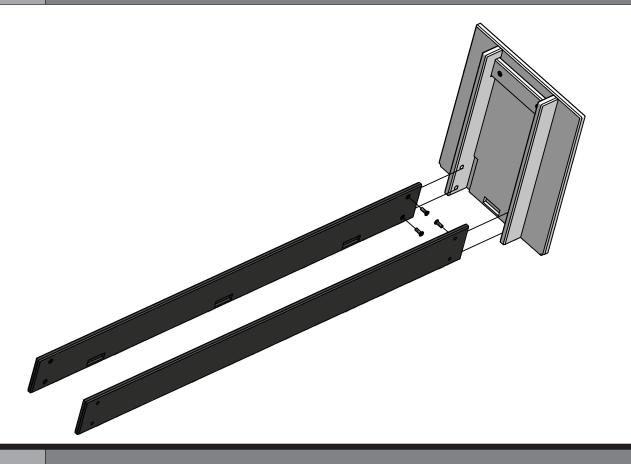

Align Seat Braces with the Side as shown with the cutouts facing in and holes in the end aligned with the threaded holes of the Side Assembly. Insert 7/8" Black bolts and finger tighten to attach.

Repeat for opposite Side Assembly.

3 ATTACH SEAT

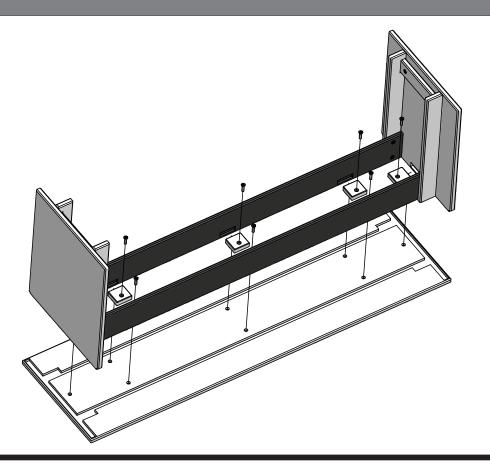

Lay the Seat down on clean surface with cut outs face up. Fit assembled Sides and Braces with the Seats cut outs. Place Square Blocks (recessed holes side out) into the Sides and Braces cut outs, insert 1" bolts through the blocks into the Seats threaded holes and finger tighten.

Using provided wrench, securely tighten all bolts.