


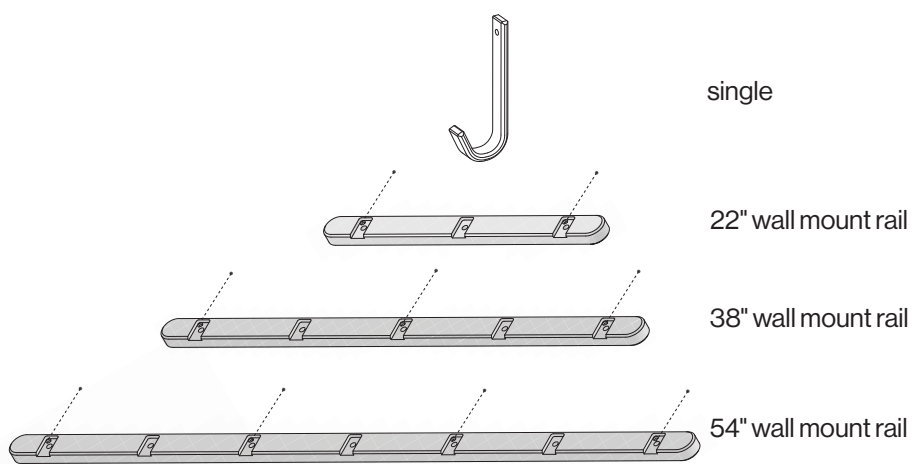

1. Mark hole locations on wall, make sure you are marking the hole that is in the top left of the hole section. Be sure to use a level.

Showing Instructions for the toggle with machine screw, to use on hollow walls


2. Use a drill with 1/2 inch diameter bit to create the hole.

**Optional method for toggles with a pointed tip: Hold metal channel flat against the plastic straps. Use pointed tip of metal channel to puncture wall, push forward and rotate left and right to hand drill hole into wall*


*** If installing on anything other than sheetrock you must use drill method for creating mounting holes.*




3. Hold metal channel flat against the plastic straps and slide the channel through the hole.

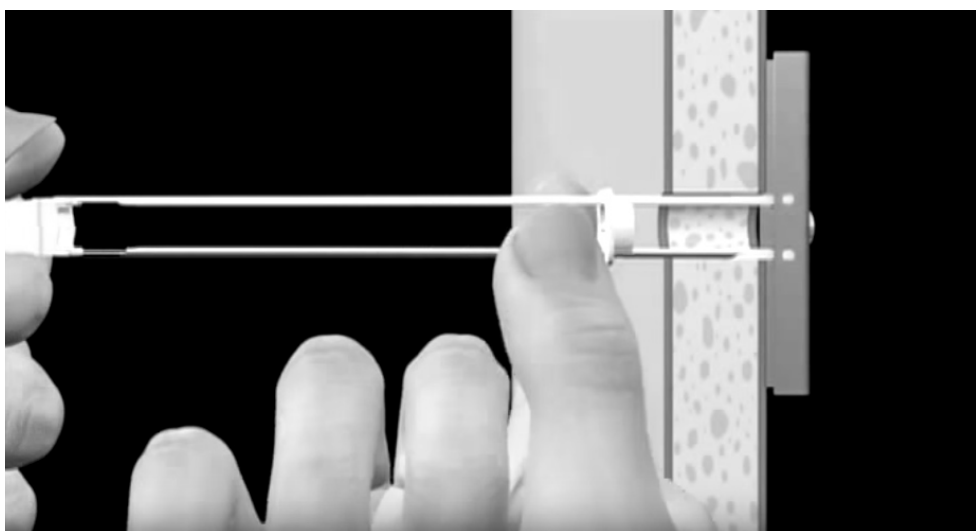


4. Pull plastic straps toward you until the channel rests behind the wall. Slide the cap down the straps until the cap's flange is flush with the wall.

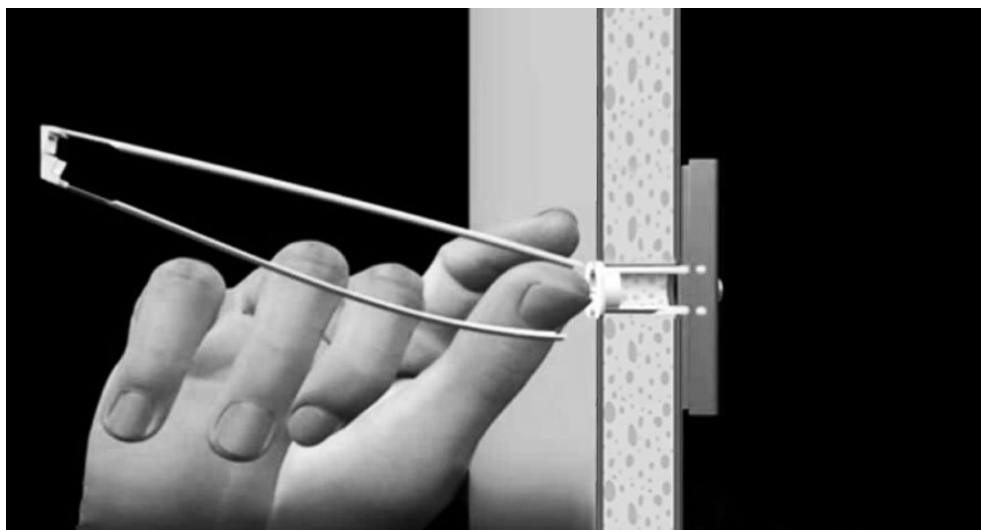

5. Place your thumb between the straps at the wall and push your thumb side to side, snapping off the straps level with the cap.
- Repeat for steps 2-5 for other holes.

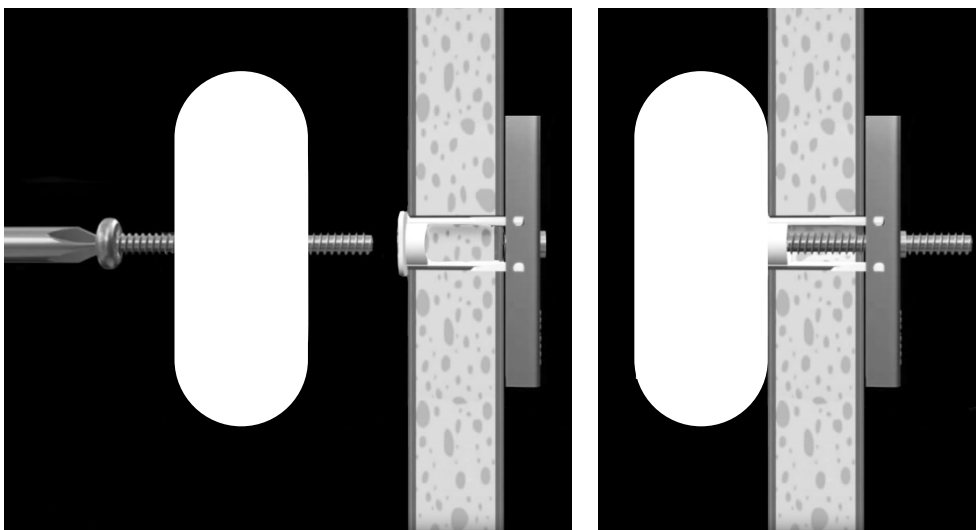

6. Insert provided machine screw through the mounting board and thread into the channel and tighten securely using screwdriver.

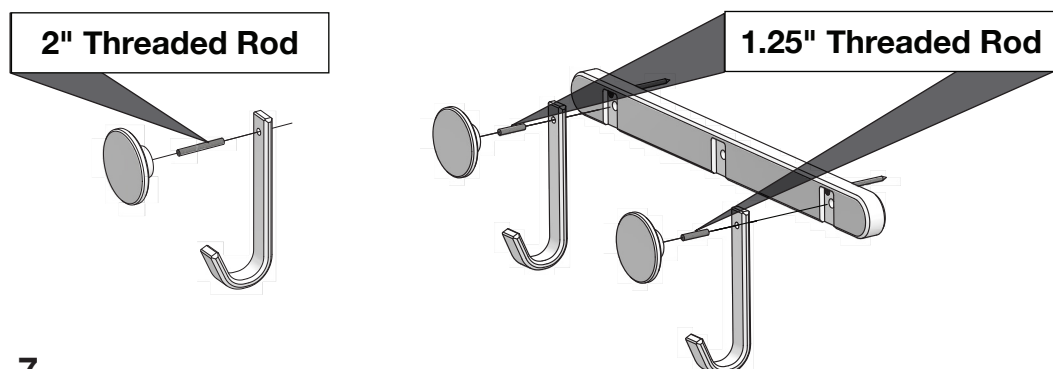

7. Once all the toggles are placed you can place the hook, the threaded rod and Brodie and thread until tight into all the holes on the wall mount rail.

**showing the standby single and 22" wall mount rail*

