



INCLUDED PARTS



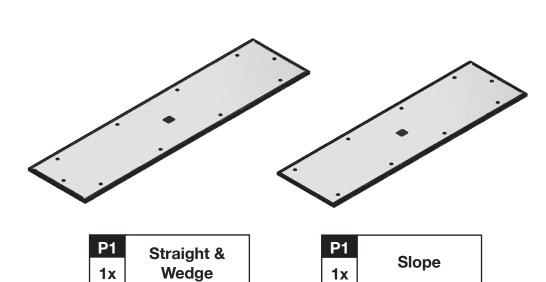

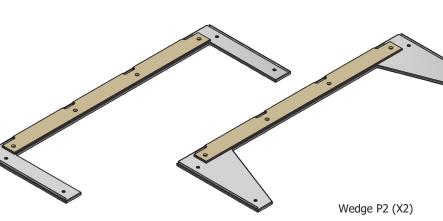



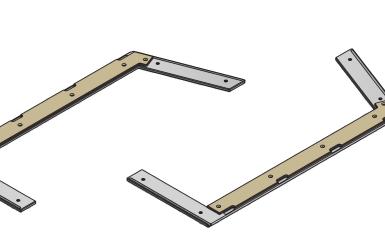






7/8"

*Bolt shown actual size.

18x


17x



Р3				
STR W	SLP			
2x	1x			




.5 GB			
STR W	SLP		
18x	17x		

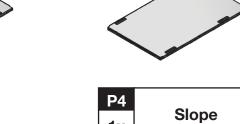

1x



.5 GB			
STR W	SLP		
18x	17x		

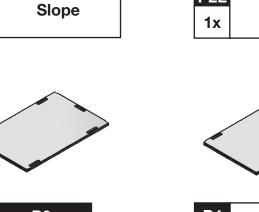

-		
- 1		
- 1		
- 1		
- 1		
_		

.5 GB				
STR W	SLP			
18x	17x			

STRUCTIONS & PRODUCT INFO:

"Loll Designs inspires people to appreciate the outdoors."

Greg Benson - Founder

STRAIGHT, WEDGE, SLOPE TESSELLATE BENCHES

ASSEMBLY TIPS: 5 Important Points You NEED to Read

- Prior to beginning assembly, please inspect and inventory the parts to make sure you have everything and that nothing was damaged during shipping. If damage has occurred, please take photos and go to lolldesigns.com/damage. Rest assured we'll get it taken care of straight away!
- Start all bolts by hand to ensure proper alignment and to prevent cross threading. Then using the provided tool, tighten until you feel resistance. Do not overtighten. To avoid scratching furniture, assemble on a clean, soft surface like a blanket, carpet, or the flattened cardboard box the furniture was shipped in.
- still be installed without tools or excess force. Bolts should not be forced, but some components, particularly blocks, fit snug but can
- If parts are still not going together, please send us a photo of the part you are having trouble with.

For more info and visual aids, watch the assembly videos at www.lolldesigns.com/videos For product care & maintenance, visit www.lolldesigns.com/care-maintenance For further **loll**ygagging assistance, please reach out!

WE WANT YOU TO LOVE YOUR LOLL

+1 877-740-3387 sales@lolldesigns.com

Duluth, Minnesota 55807 5912 Waseca Street We've gone through great lengths to make as much of our packaging as possible recyclable. The cardboard box, paper wrap, filler and paper bags can all go in your recycling bin. The muslin hardware bags replaced plastic bags with the intention of reducing plastic and encouraging reuse. Loll Designs and Planet Earth thank you!

RECYCLE THE PACKAGING

<u>.</u>

4.

ω

ы

BLOCK & BOLT INSTALLATION

as shown below. Insert bolts through countersunk hole side of blocks

